

Fortified Hurricane Roof

This Guide is not intended to be used as an educational document. The Fortified Roof Installation and Proper Training are the sole responsibility of the Builder and/or Roofer. This document demonstrates some but not all of the requirements for a Fortified Hurricane Roof Installation. All Photos should be taken from all points of the roof. This document is intended for informational use only.

1 Photo Each of all Materials and Packaging



Decking



Deck Nail



Underlayment



Starter Strip



Shingles




Ventilation

Decking Attachment 8 Photos




4" OC

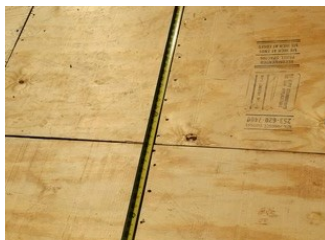


4" OC



4" OC

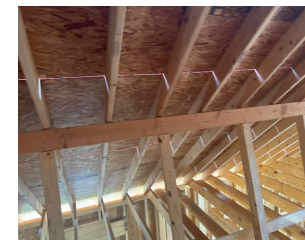

Post Nailing

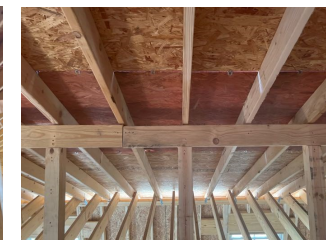

Post Nailing



Post Nailing

Rafter Confirmation 8 Photos

Taped Seams 8 Photos



Zip Panel



Taped Seams



Taped Seams

Underlayment Attachment 8 Photos



Underlayment



2X Underlay



Ice/Water



Fortified Hurricane Roof


Drip Edge Installation 8 Photos



Drip Edge




Drip Edge

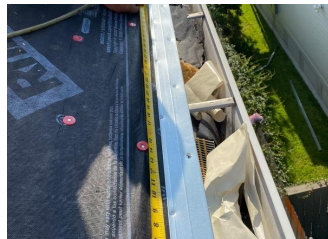

Drip Edge

Starter Strip Installation 8 Photos

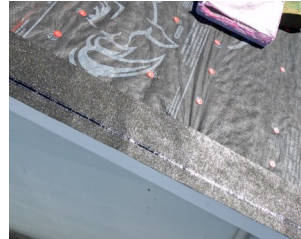

Starter Strip



Starter Strip



Starter Strip

Completed Roof 8 Photos Each Elevation



Final Roof



Final Roof



Final Roof

Completed Roof Vents 4 Photos



Roof Vents





Ridge Vents



Gable Vents

Re-Decking over Board Lumber Requires a Longer Nail

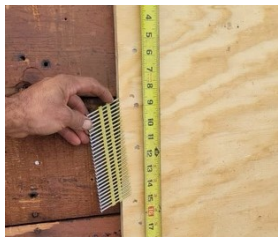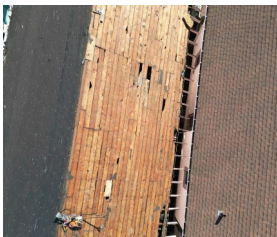

AES is a Certified Fortified Evaluator. The knowledge required to install a Fortified Roof is the sole responsibility of the Builder/Rofer.

If all parties work together the process can be very efficient.

It is important that the Builder and/or Roofer Understand the Fortified Process.

Please do not start work until AES has had the opportunity to view and discuss the scope of your project.

